

ONIDA

 
OWNER'S PRIDE

User's Manual

SEMI AUTOMATIC WASHING MACHINE

CYCLONE

MODEL : **S11GS.**
S12GS1.

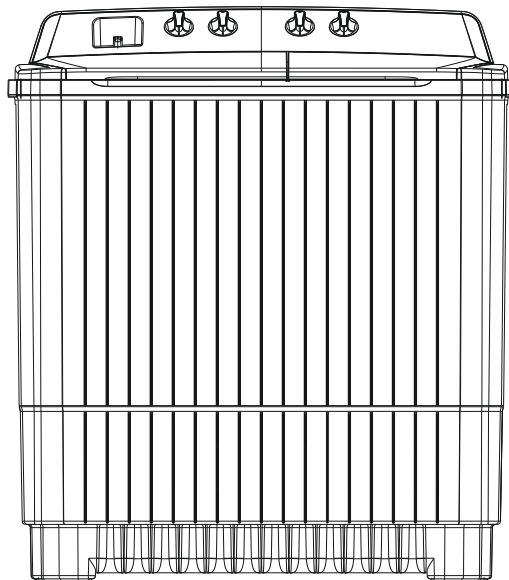

Before operating the Washing Machine, Please read this Guide thoroughly, and retain this manual for future reference.

Dear Customer

Congratulations on being the Proud owner of Semi Automatic Washing Machine.
Your Washing Machine comes with a Guarantee of Quality.

We take great pride in providing its customers with perfect products that adheres to international quality standards.

We are committed to international quality standards.

We are committed to provide the ultimate customer satisfaction as nothing brings us greater joy than having satisfied customers.


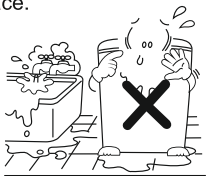 

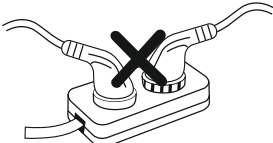 
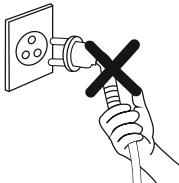 



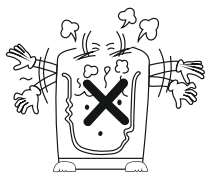 



Feedback and suggestions based on your product usage experience are greatly appreciated.

Contents

SAFETY MEASURES.....	1
INSTALLATION.....	2
PARTS IDENTIFICATION.....	2
CONTROL PANEL INFORMATION.....	3
PACKING LIST.....	3
WASHING PROCEDURES.....	4
RINSING & DRYING.....	5
CLEANING MACHINE.....	6
TROUBLE SHOOTING GUIDE.....	7
MAINTENANCE.....	7
SPECIFICATION SHEET.....	8
WIRING DIAGRAM.....	8
E-WASTE MANAGEMENT	9
WARRANTY.....	10
WARRANTY REGISTRATION CARD.....	11
E-WASTE DISPOSAL.....	

SAFETY MEASURES





Observe the following guidelines for the durability of the washing machine and safety problems.

<ul style="list-style-type: none"> Do not expose the washing machine to direct sunlight or rain 	<ul style="list-style-type: none"> Do not install the washing machine around a damp place. 	<ul style="list-style-type: none"> Do not sprinkle water over the control panel switches. 
<ul style="list-style-type: none"> Do not plug many cords in one outlet at the same time. 	<ul style="list-style-type: none"> When plugging out the power cord, do not hold the wire. 	<ul style="list-style-type: none"> Keep children away from the washing machine. 
<ul style="list-style-type: none"> Keep the Machine away from fire or heat source. 	<ul style="list-style-type: none"> Do not pour caustic soda & bleach over the washing machine. It causes damage to the rubber parts. 	<ul style="list-style-type: none"> Do not pour water with a temperature exceeding 50° C into the tub. 
<ul style="list-style-type: none"> Make sure of closing the lid, particularly during spinning. 	<ul style="list-style-type: none"> Do not put your hands into the rotating tub. 	<ul style="list-style-type: none"> Let water drain away from the drain hose thoroughly. 


INSTALLATION

Installation area

    
- Set on flat and firm floor.
- Incorrect installation may cause severe noise and break down.

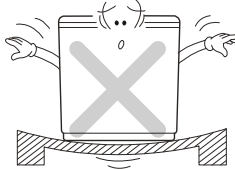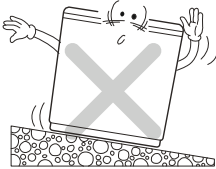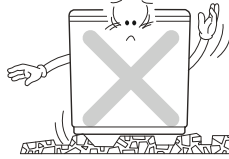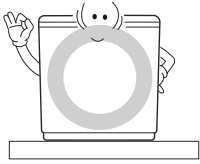

 - Maintain gap more than 10 cm. Between the side of drain hose and the wall.
- A carpet must not obstruct the ventilation openings.

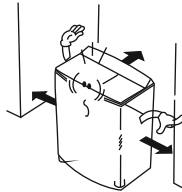


PARTS IDENTIFICATION

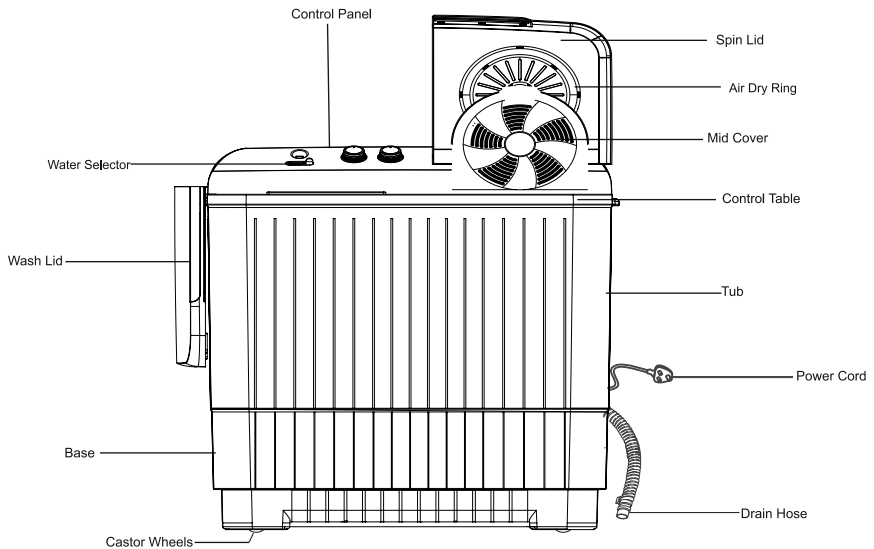 

Note : Graphics and Images shown in manual may differ than actual product, it is for reference only

 CONTROL PANEL INFORMATION

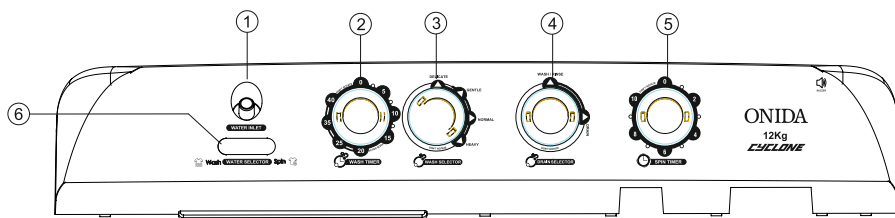

Note : Graphics and Images shown in manual may differ than actual product, it is for reference only

1. WATER INLET

- This is used to fill water.

2. WASH TIMER (Time 40min or 35min vary as per model)

- This is used to set wash timer for washing clothes. Put Clothes in the wash tub with water and detergent.
- Select timer for time period required from 0-40 minutes.
- For the first 25 minutes Soak / Rinse will work After that clothes will be washed for 15 minutes.
- A buzzer sound will indicate the end of wash period.

3. WASH SELECTOR

- Select Wash option from given programs (Delicate / Gentle / Normal / Strong).

4. DRAIN SELECTOR

- This is used to select Wash / Rinse or Drain.

5. SPIN TIMER

- This is used to set Spin timer for 0-10 minutes.
- After washing, load clothes into the spin tub to spin.

6. WATER SELECTOR

- This is used to direct water supply into Wash Tub or Spin Tub

*note : Do not keep W ater Selector in mid position. This may damage electrical parts.

PACKING LIST


Name	Quantity
Twin-tub Washing Machine	One unit
Spin Cap	One unit
Water Inlet Pipe	One unit
User Manual	One unit
Drain Hose	One unit
Drain Hose clamp	One unit

WASHING PROCEDURES

A) Washing


1. Before start washing, check the following;

 - Set the water selector knob to 'WASH'.
- Connect the water supply hose and open the water tap.
- Connect the power cord to the power supply outlet.
- Lay the drain hose down toward a sinkhole.

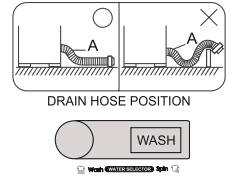

2. Set the WASH SELECTOR KNOB to the desired mode.

 
- Set from options Delicate, Gentle, Normal and Strong.

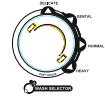


3. Set the DRAIN SELECTOR KNOB to 'WASH/RINSE'.



 4. Load laundry in the wash tub.

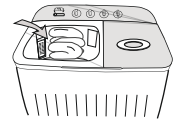

 5. Fill water in the wash tub and add the detergent.

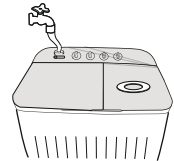

6. Set the WASH TIMER. (Time 40min or 35min vary as per model)

- Set the Wash Timer 1-40 min.
(Set the Wash Timer to a point between 15 to 40 mins for soak function).

SOAK FUNCTION

If the WASH TIMER is set to a point between "15" to "40", the washing machine start the wash, after the soak (25 mins) is completed.



7. After washing, set the DRAIN SELECT OR KNOB to 'DRAIN' for drain.

RINSING & DRYING

A) Rinsing

1. Set the DRAIN SELECTOR KNOB to WASH/RINSE
2. Supply the proper amount of water as not to overflow the top of the washing tub.
3. Set the WASH TIMER 2-3 minutes.
4. Drain the water. Set the DRAIN SELECTOR KNOB to 'DRAIN'.
5. Repeat this cycle until drain water is clean.(2-3 cycles).
6. Be sure to lay the drain hose down.



B) Additional Rinse

 
1. Load Laundry
 - Load the laundry evenly into the spin basket.
2. Set SPIN
 - Set the WATER SELECTOR KNOB to SPIN(a) and DRAIN SELECTOR KNOB to 'DRAIN'(b)
3. Supply Water
 - Supply water for about 1 minute.
 - Adjust the water flow to prevent overflow from the spin tub.
4. Safety Cover
 - After stopping water supply, cover the laundry with safety cover and close the inner lid.
5. Close the spin dryer
 - Close the spin dryer lid.
6. Set SPIN TIMER
 - Set the SPIN TIMER for 2-3 minutes.




SAFETY COVER

C) Drying

1. Transfer the clothes into the spin basket and arrange clothes evenly .
2. Be sure to attach the safety cover and close the inner lid.
3. Close the spin dryer lid.
3. Set the SPIN TIMER
 - Set timer between 1-10 min for drying.

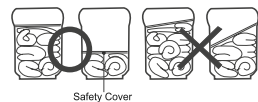

Safety Cover

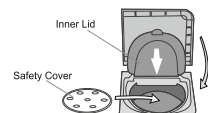 


CLEANING MACHINE

A) Cleaning MAGIC FILTER

1. Push the upper part of the Magic filter and pull in.



 
2. Open the cover as shown in figure

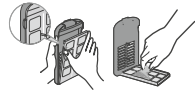

3. Clean the Magic Filter



 4. Close the cover and insert the lower 'A' part of the filter in the basket first and push the Filter from upper part 'B' with "click" sound.

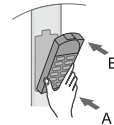

B) Cleaning the WASH TUB

- Wipe off stains on the cabinet and operation panel with soft cloth.
- Do not use benzene, thinners, cleanser, or wax, or scrub the washing machine with a brush. Painted surfaces or plastic parts may get damaged.
- When cleaning do not spray water directly on the washer. It can shorten life span of product. Also It might cause electric shock or fire.

TROUBLE-SHOOTING GUIDE

Before you call for a technician or send the machine for repair, please check from this troubleshooting lists.

*Do not attempt to repair the machine by yourself. Please contact the authorised service center.


TROUBLE	CHECKPOINT
The washing machine does not work.	<ul style="list-style-type: none">• Is the power supply cord connected to a power outlet?• Is the power cut?• Is the pulsator tangled with something?
Unable to drain	<ul style="list-style-type: none">• Has the Drain hose been lowered?• Is the Drain hose blocked?• Is the Drain hose kinked?
Abnormal sound during wash.	<ul style="list-style-type: none">• Are there any loose articles in the Wash tub?
Incomplete spinning (Severe vibration or unbalance)	<ul style="list-style-type: none">• Are the laundry arranged evenly?• Is the machine being placed on a flat and solid ground?• Are there any clothes dangling on the Spin Tub?• Are there too many laundry in the Spin Tub?• See “C) Drying....” on page 5.

MAINTENANCE

Note:

Please unplug the power supply cord before clean-up.

 1. After you have washed the clothes, keep the door of machine open to let the moisture and dampness dry out. If you have washed very greasy and dirty load, make sure to clean the machine and tub with a damp cloth to remove any slimy build up.
2. There will be lint left behind in the Magic Filter after each use which need to be cleaned frequently to maintain its top performance.
3. Clean the machine with a soft damp cloth.
4. Do not spray water directly onto the machine.
5. Do not use petroleum-based detergent to clean the machine.
6. Overloading the machine may stop your laundry from washing properly, unbalance the machine and reduce spin efficiency.
Take particular care when washing heavier or bulkier items such as towels or bedding.

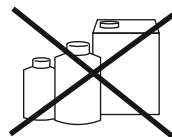


SPECIFICATION SHEET

MODEL	S11GS	S12GS1
Power Supply	230 V~/50 Hz	230 V~/50 Hz
Washing Capacity	11.0 kg	12.0 kg
Max Water Level	103 L	103 L
Power Wash	530 W	550 W
Power Spin	165 W	165 W
Product Weight	28.0 kg	29.0 kg
Product Dimension (W x D x H)	(91.5 x 56.0 x 101.5) cm	(91.5 x 56.0 x 104.5) cm
No. of Wash Program	3	4
Wash Time	15 min	15 min
Soak Time	20 min	25 min
Spin Time	5 min	10 min


Note : Due to Continuous R&D, above Specification may change without any prior notice

WIRING DIAGRAM

 For S12GS1 Model (4 Program)

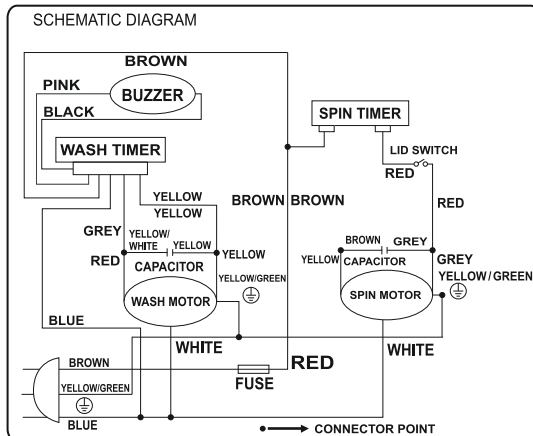

For S11GS Model (3 Program)

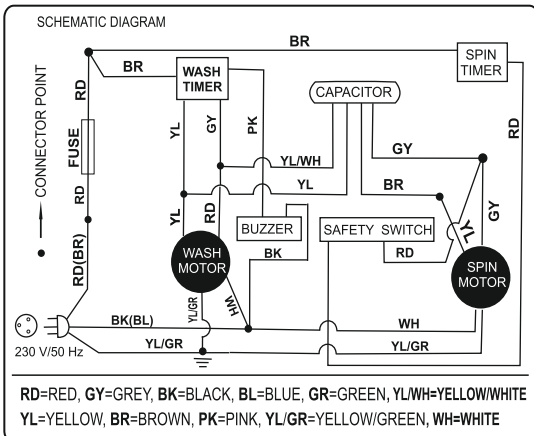 

E-WASTE MANAGMENT



Compliance with E-waste Management Rules :

As per the Government of India's **E-Waste (Management) Rules, 2022)**

Gazette :G.S.R 801(E) 02/11/2022 (**As amended from time to time**)

under Environment protection Act 1986/29 end of life products Intended to be discarded should be channelized for dismantling and recycling through authorized dismantler and recycler only to ensure environmentally sound management of E waste. This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This product has been manufactured with parts and materials that can be reused and are suitable for recycling. Do not dispose of the product with normal domestic and other wastes at the end of life. To facilitate return of End of Life product, visit our website www.onida.com for details or contact nearest authorized service center.

WARRANTY

Standard Warranty period

Extended Warranty Period (applicable only
on the parts mentioned below)

2 years

8 years (only on wash motor)

Customer Privileges.

1. The warranty is confirmed only to the first purchase of the appliance and is non-transferable. This warranty card and purchase bill shall be presented to our staff at the time of service and the warranty shall be void if the warranty card is altered/tampered with or lost.
2. The warranty period (both standard Warranty Period and Extended Warranty Period) starts from the date of purchase of the appliance and shall be available to products installed within municipal limits.
3. The warranty covers only manufacturing defect in material that may arise despite normal operation and usage of the appliance in accordance with the user manual.
4. Repairs, installations & removal of the appliance shall be got carried out only by an Authorized Service Personnel, failing which warranty will be void.
5. In the event of change of address and contact details, the new address and the new contact details shall be intimated to the Authorised Service Center on the given toll free number for ensuring proper installation, Charges shall be applicable and borne and paid by customer.
6. Repairs &/or replacement of parts covered under warranty would be purely at the sole discretion of the Company & Authorised Service centre Head only.
7. In the event of a part covered under warranty / wash motor required to be repaired then our person's obligation will be to repair such part/ wash motor to restore the product to working condition.
8. The company's obligation in respect of parts covered under warranty in event where repair is not possible shall be to provide replacement of defective parts with a functionally working part / wash motor of any brand/make.
9. It is hereby clarified that on expiry of Standard Warranty Period, visiting charges will be applicable for all visits and the same will be borne by the customer. In the Extended warranty period, in case the product needs to be transported to the Authorised Service Center for repair, the transportation charges from and to the place of installation shall be borne and paid by the customer.
10. The customer shall provide a reasonable, sufficient and safe working space to access the appliance for service. The customer is liable to move away all blocking objects or move the appliance to an appropriate location with electricity /gas/water supply and drainage for testing of the appliance.
11. In case of appliance requires to be repaired at service centre, all expenses incurred in transportation of the appliance or parts thereof from and to the company's Authorised Service Center, as well as expenses incurred on deputing of service personnel/technician towards conveyance, inspection and other incidental expenses, will borne and paid by the customer.
12. In case of repairs the replaced spare part will be warranted only for the unexpired period of the warranty.
13. The company shall be under no obligation or deemed to be in default or liable for cost , compensation , damage, penalty , fine, or otherwise on account of delay or failure in performance resulting from causes beyond its reasonable control (e.g. strikes, floods, earthquakes etc.) including but not limited to delay in servicing due to non-availability of spare parts and/or accessories.
14. The defective part shall belong to the company.
15. Warranty issued is subject to purchase from authorized dealers and repair by company's authorized service centre only .
16. Dispute if any in respect of Warranty shall be subject to exclusive jurisdiction of Mumbai court irrespective of the point of sale

Warranty is not applicable in any of the following cases:

1. If the warranty card is not duly filled and does not bear the stamp, date and signature of the authorized Dealer.
2. The warranty does not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly as a result of appliance failure, breakdown, or accident or usage of the Appliance not in accordance with the operating / user manual.
3. Warranty is not applicable on plastic parts , electrical parts ,top, lid, assembly, control panel , window, knobs, nut , bolts, drain pipe, cabinet, dispenser assembly, drain hose, filter, castors, wheels, foot, drum , body of the washing machine and washer .The warranty does not cover consumables, normal wear & tear parts, plastic, glass and/or rubber parts, operational parts and accessories.
4. If the Appliance has been subjected to improper use such as operated on trolley other than the one, if any purchased from the Company, use contrary to user manual, misused, abused, not cared for, abnormal use, use of sea water, sub-standard detergent, exposure to dampness, excessive heat, excessive humidity and other extreme environmental conditions, corrosion, damage beyond repair, rusting, unauthorised modifications, unauthorized repairs, neglect, accident, damage in transit, alteration, acts of God, spillage of liquid or food particles, faulty electric wiring/cabling, abnormal voltage/power supply beyond appliance specifications, damage/breakage/non-functioning of appliance due to rodents, rats, cockroaches and ants etc.
5. The warranty does not cover preventive checks, routine maintenance, cleaning, de-scaling and overhaul and charges shall be borne and paid by Customer.
6. If the Appliance is used by commercial establishment including but not limited to hospitals, saloon, institutions, laundry, community hall and other similar establishment or by an individual/ firm for commercial purpose.
7. If the warranty card, bill of purchase, serial number of appliance is removed, altered, defaced, made illegal/tampered with. No Person including the customer, dealer, service personal shall have the right to vary the terms of this warranty.
8. If incorrect/not suitable detergents are used for laundry appliances.
9. If repair, installation work is carried out by persons other than Authorised Service Personnel.
10. Damage to the appliance or any part(s) due to transportation or shifting or arising out of improper storage of the appliance at the Customer's premises.

WARRANTY CARD

Machine Sl. No.: _____	
Model : _____	
Dealer's Name : _____	
Address : _____	
Date of Purchase : _____	
Date of Expiry : _____	
Stamp of Dealer	

* CONDITIONS APPLY AS DESCRIBED IN MANUAL

Disposal & RoHS Declaration



This product is ROHS compliant

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device for environmentally safe recycling please use the collection systems or contact the brand help desk.

RoHS
COMPLIANT



24x7 Customer Care No.

74 909 55 555

www.onida.com

Email: customer.care@onida.com



MARKETED BY :

MIRC ELECTRONICS LIMITED

ONIDA HOUSE, G-1, MIDC, MAHAKALI CAVES ROAD,
ANDHERI (EAST), MUMBAI 400 093

MADE IN INDIA
www.onida.com