


OPERATING INSTRUCTIONS

INTERMEDIATE SPIN

Step B

- Transfer the laundry to the spin tub, arrange it evenly and place the spin cap on top of the laundry tightly and horizontally.

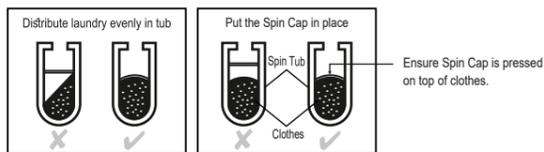

- Set the spin timer to 2-4 min.

Note : 1. Do not open the Spin Lid while spin tub is running.

- If laundry is not spread evenly or spin cap is not put tightly then the Spin tub will vibrate and hit the Tub. Machine may move from its place.

RINSE

Step C

1. SOAK RINSE – This is recommended for normally soiled clothes.

- Transfer the laundry from spin tub to the wash tub.
- Set the WASH-DRAIN SELECTOR knob to wash.
- Take the water up to appropriate level.
- Set the wash time to 4 to 6 min. Soak rinse will be performed.

2. OVER FLOW RINSE – This is recommended if more detergent was used or for baby clothes.

- Transfer the laundry from spin tub to the wash tub (after step B).
- Set the WASH-DRAIN SELECTOR knob to wash.
- Take the water up to appropriate level.
- Set the wash time to 4 to 6 min. Overflow rinse will be performed.
- Keep the water tap on so the water flows while the Overflow rinse is being performed.

3. SPIN SHOWER RINSE/WATER SAVER RINSE – This is recommended for less soiled cloths / for water saving.

- This to be performed after Step B.
- For complete procedure of SPIN SHOWER RINSE / WATER SAVER RINSE refer Page no. 8.

- 7 -

MAINTENANCE

- Remove the power plug after washing.
- Must clean tubs after bleaching or starching, otherwise, some deposit will be created.
- Wipe the washer clean and dry with a soft cloth.

- Clean the waste thread collected in the Magic Lint filter.

- Push the upper part of the filter and pull out.
- Open the cover as shown in the figure.
- Clean the filter.
- Close the cover and insert the lower part of the filter in basket first and then push the filter with "click" sound.



CAUTION : It is advisable never to run the machine without Magic lint Filter Assembly as foreign lint may damage the machine.

NOTE : In case of Magic Lint Filter damage, please replace with new unit available at your ONIDA Service Centre near to you.

- Clean the brush to get rid off residues and lints accumulated over the bristles.

- 10 -

OPERATING INSTRUCTIONS

PROCEDURE FOR SPIN SHOWER RINSE / WATER SAVER RINSE
 सिन्दर शौहर रिस (अतिरिक्त स्फोरलेंट) / पानी बचत रिस क्रि विधि

Spin shower rinse removes remaining detergent from the clothes & can save an additional rinsing and water (spin tub not rotating).
 सिन्दर शौहर रिस कपडों से साबुन का पानी कपडों से निकर जाएगा, इस तरीके से पानी एवं अतिरिक्त रिस बचत हो सकती है।

1) Put the laundry evenly into the spin dryer basket. Place the safety cover horizontally on the laundry. कपडों को सिन्दर टब में फैलाकर डाल दे। सुरक्षा कवच को ऊपर समतल रख दे।

2) Make sure SPIN TIMER is at "0" (zero) position (spin tub not rotating). सिन्दर टाइमर को '0' पर सेट कर दे।

3) Set water selector to "SPIN". वॉटर सेलेक्टर को सिन्दर पर कर दे।

4) Open water tap and allow the water to flow to spin tub about 2 min. नल खोलकर 2 मिन्ट तक पानी सिन्दर टब में भरने दे।

5) Turn off the water supply and set the spin timer for 2 min. नल को बंद करे और सिन्दर टाइमर को 2 मिन्ट पर लिखित कर दे।

6) Repeat step 2 to 5 two times. 2 से 5 कि क्रिया दो बार दोहराए।

Note: Please ensure spin tub is not rotating while water is flowing to spin tub. If spin tub is rotating, water will thrown all around inside the machine from top of spin cap, without flowing through clothes. Clothes will not get wet & water is wasted without removing detergent in clothes.
 सुचना: सिन्दर टब में पानी भरते समय, सिन्दर टब न घुमें व सुनिश्चित कर लें. यदि सिन्दर टब घुम रहा होगा, पानी सिन्दर कवर के ऊपर से, कपडोंकी बिना शिथीए सथिन से बह जाएगा, इससे पानी कपडों से बिना साबुन निकाले बह जाएगा

- 8 -


TECHNICAL SPECIFICATIONS

Technical Specifications			
Capacity	Wash 7Kg	Wash 7.5Kg	Wash 8Kg / 8.5 Kg
Power supply	230 V AC, 50 Hz	230 V AC, 50 Hz	230 V AC, 50 Hz
Input Power	Wash 350 W, Spin 120 W	Wash 400 W, Spin 160 W	Wash 460 W / 500W, Spin 160 W
Water supply	Less than 1Kg/F/cm2; Less than 10m water head		
Net weight (approx.)	22.5 kg	22.5 Kg	22.8 Kg
Machine dimensions	78.2(L) x 46.1 (W) x 89(D) cm	78.2(L) x 46.1 (W) x 100.9(D) cm	78.2(L) x 46.1 (W) x 103.1 (D) cm

Your Washing Machine is star rated as per the Energy Star Label pasted on the product. Description of ENERGY SAVING WASH METHOD for the rated load is as below.

Wash Selector : GENTLE

Wash Method

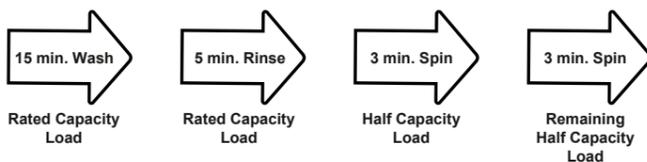

• Water level Overflow.

* Under test condition, when tested in accordance with standard IEC 60456:2010 & BEE schedule -12 (Rev. 03) Actual performance of the machine will depend on how the appliance is being used.

Note : The appearance and specifications are subject to change without notice to raise the unit quality. The graphics shown in the manual are schematic and it is possible that they do not conform to your washing machine.

- 11 -

OPERATING INSTRUCTIONS

SPIN DRYING

Step D

- Transfer the laundry to the spin tub, arrange it evenly and place the spin cap on top of the laundry tightly and horizontally.
- Close the inner and outer spin lids.
- Turn the "SPIN TIMER" knob clockwise to the desired time. The spin dry process will begin.

Type of the clothes	Spin-drying time
Shirts (synthetic)	1-2 min
Undershirts	3-5 min
Work clothes	5 min

TROUBLE SHOOTING

Troubles	Check up		
No washing	Is the wash timer knob at the "0" position?	Is the pulsator clogged?	
No spinning	Is the spin control knob at the "0" position?	Is the lid open?	Is the laundry unevenly balanced?
No drain	Is the drain hose not kept down?	Is the drain hose twisted? Or is the threshold too high?	Is the drain hose frozen?
Washing is forceless	<ul style="list-style-type: none"> Is the clothes load too much? Is the voltage too low? 		

IF YOU NEED HELP :

In case the problem is not solved, contact your local ONIDA service centre for the correction and analysis.

- 9 -


PROCEDURE FOR USING BRUSH (BRISTLE WASH)

* Note: This features applicable as per selected models only.

PROCEDURE FOR USING BRUSH

Soak cloths in wash tub with soap water (for best results use minimum water and keep clothes for minimum 20 minutes)

- Turn wash timer knob to zero position (Do not operate wash and brush together).
- Select BRUSH mode with drain selector knob.
- Set SPIN/BRUSH timer to desired time (brush starts rotating)
- HOLD WET DIRTY AREA AGAINST BRUSH AND PRESS GENTLY WITH FINGERS (like cuffs, collar, stained area etc.) Check intermittently, do not press too hard on the brush. After brushing turn drain selector knob to wash/rinse-spin mode Add water as required and continue washing.

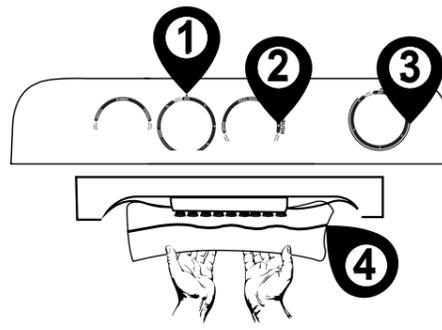

ONIDA
OWNER'S PRIDE

User's Manual

SEMI AUTOMATIC WASHING MACHINES

Dear Customer ,

Congratulations ! You are now a proud owner of Onida Washing Machine. Study the user's Manual and take precautions for optimal performance and retain this manual for future reference.


Once again, Welcome to the happy ONIDA family.

Contents :

* PARTS IDENTIFICATION	1-2
* INSTALLATION	3
* SAFETY PRECAUTION	4
* PREPARATION BEFORE WASH	5
* OPERATING INSTRUCTIONS	6-9
* TROUBLE SHOOTING	9
* MAINTENANCE	10
* TECHNICAL SPECIFICATIONS	11
* PROCEDURE FOR USING BRUSH	12
* WARRANTY CARD	

Save Environment : Do not throw packaging waste of Plastic and Expanded Polystyrene (Thermocol) anywhere. Deposit it in collection center or return it to MPCB/CPCB approved Recycler. For more information please visit our website www.onida.com

"Proper use of Washing Machine Saves Electricity & Time"

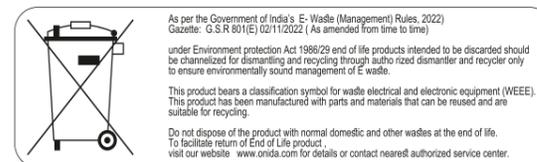

The model(s) mentioned in this user manual comply with RoHS regulations as per "E-Waste (Management) Rules, 2022"



ONIDA
OWNER'S PRIDE

MANUFACTURED & MARKETING BY :
MIRC ELECTRONICS LIMITED
 ONIDA HOUSE, G-1, MIDC, MAHAKALI CAVES ROAD,
 ANDHERI (EAST), MUMBAI 400 093.
 MADE IN INDIA
www.onida.com

Part no. 11083923

- 12 -

WARRANTY


Standard Warranty period
2 years

Extended Warranty Period (applicable only on the parts mentioned below)
5 years (only on wash motor)

Customer Privileges.


- The warranty is confirmed only to the first purchase of the appliance and is non-transferable. This warranty card and purchase bill shall be presented to our staff at the time of service and the warranty shall be void if the warranty card is altered/tampered with or lost.
- The warranty period (both standard Warranty Period and Extended Warranty Period) starts from the date of purchase of the appliance and shall be available to products installed within municipal limits.
- The warranty covers only manufacturing defect in material that may arise despite normal operation and usage of the appliance in accordance with the user manual.
- Repairs, installations & removal of the appliance shall be got carried out only by an Authorized Service Personnel, failing which warranty will be void.
- In the event of change of address and contact details, the new address and the new contact details shall be intimated to the Authorized Service Center on the given toll free number for ensuring proper installation. Charges shall be applicable and borne and paid by customer.
- Repairs &/or replacement of parts covered under warranty would be purely at the sole discretion of the Company & Authorized Service centre Head only.
- In the event of a part covered under warranty / wash motor required to be repaired then our person's obligation will be to repair such part/ wash motor to restore the product to working condition.
- The company's obligation in respect of parts covered under warranty in event where repair is not possible shall be to provide replacement of defective parts with a functionally working part / wash motor of any brand/make.
- It is hereby clarified that on expiry of Standard Warranty Period, visiting charges will be applicable for all visits and the same will be borne by the customer. In the Extended warranty period, in case the product needs to be transported to the Authorized Service Center for repair, the transportation charges from and to the place of installation shall be borne and paid by the customer.
- The customer shall provide a reasonable, sufficient and safe working space to access the appliance for service. The customer is liable to move away all blocking objects or move the appliance to an appropriate location with electricity /gas/water supply and drainage for testing of the appliance.
- In case of appliance requires to be repaired at service centre, all expenses incurred in transportation of the appliance or parts thereof from and to the company's Authorized Service Center, as well as expenses incurred on deputing of service personnel/technician towards conveyance, inspection and other incidental expenses, will borne and paid by the customer.
- In case of repairs the replaced spare part will be warranted only for the unexpired period of the warranty.
- The company shall be under no obligation or deemed to be in default or liable for cost, compensation, damage, penalty, fine, or otherwise on account of delay or failure in performance resulting from causes beyond its reasonable control (e.g. strikes, floods, earthquakes etc.) including but not limited to delay in servicing due to non-availability of spare parts and/or accessories.
- The defective part shall belong to the company.
- Warranty issued is subject to purchase from authorized dealers and repair by company's authorized service centre only.
- Dispute if any in respect of Warranty shall be subject to exclusive jurisdiction of Mumbai court irrespective of the point of sale

PARTS IDENTIFICATION-CONTROL PANEL

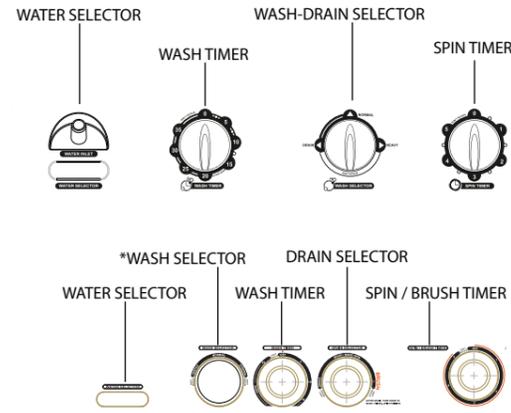


* Wash Selector's 3 or 4 Programs are applicable as per selected models only.

ACCESSORIES

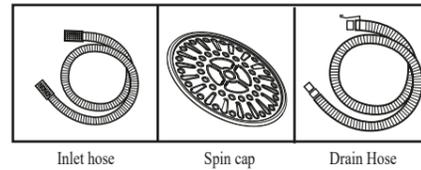

PARTS IDENTIFICATION

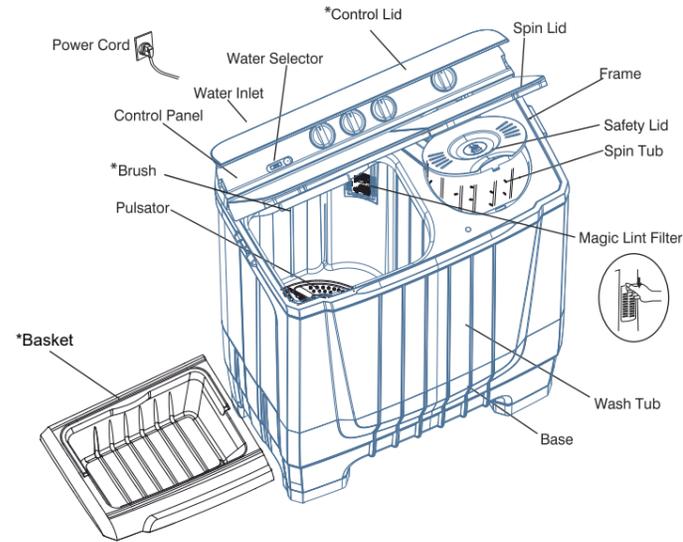

* Note: Features applicable as per selected models only.

INSTALLATION

INSTALL ON A STABLE LEVEL SURFACE

- Install washing machine on a stable level surface.
- Keep the washing machine more than 25cm away from the wall to prevent a noisy sound while spinning.
- A carpet must not obstruct the ventilation openings.



CONNECT THE DRAIN HOSE

- Connect the drain hose to the outlet of the washing machine.
- Extension Drain Hose
- Never let the end of the drain hose be immersed in water



CONNECTING POWER AND GROUNDING

- Washer earth is connected to the power plug; don't alter it.
- Ensure that the earth wire is installed securely in the power socket.
- The appliance must be positioned where the plug is accessible.
- CAUTION: Never connect the earth wire to a gas pipe, a tap water pipe, a phone wire or lightning rod.
- Do not use the washing machine in case the power cord or plug have been damaged, so as to avoid electric shock or risk fire.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid any mishap.
- Always remove the power cord from wall socket while cleaning.
- Always switch off the power when not in use.
- Avoid connecting several electric appliances to single outlet.



Warranty is not applicable in any of the following cases:

- If the warranty card is not duly filled and does not bear the stamp, date and signature of the authorized Dealer.
- The warranty does not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly as a result of appliance failure, breakdown, or accident or usage of the Appliance not in accordance with the operating / user manual.
- Warranty is not applicable on plastic parts, electrical parts, top, lid, assembly, control panel, window, knobs, nut, bolts, drain pipe, cabinet, dispenser assembly, drain hose, filter, castors, wheels, foot, drum, body of the washing machine and washer. The warranty does not cover consumables, normal wear & tear parts, plastic, glass and/or rubber parts, operational parts and accessories.
- If the Appliance has been subjected to improper use such as operated on trolley other than the one, if any purchased from the Company, use contrary to user manual, misused, abused, not cared for, abnormal use, use of sea water, sub-standard detergent, exposure to dampness, excessive heat, excessive humidity and other extreme environmental conditions, corrosion, damage beyond repair, rusting, unauthorized modifications, unauthorized repairs, neglect, accident, damage in transit, alteration, acts of God, spillage of liquid or food particles, faulty electric wiring/cabling, abnormal voltage/power supply beyond appliance specifications, damage/breakage/non-functioning of appliance due to rodents, rats, cockroaches and ants etc.
- The warranty does not cover preventive checks, routine maintenance, cleaning, de-scaling and overhaul and charges shall be borne and paid by Customer.
- If the Appliance is used by commercial establishment including but not limited to hospitals, saloon, institutions, laundry, community hall and other similar establishment or by an individual/ firm for commercial purpose.
- If the warranty card, bill of purchase, serial number of appliance is removed, altered, defaced, made illegal/tampered with. No Person including the customer, dealer, service personal shall have the right to vary the terms of this warranty.
- If incorrect/not suitable detergents are used for laundry appliances.
- If repair, installation work is carried out by persons other than Authorized Service Personnel.
- Damage to the appliance or any part(s) due to transportation or shifting or arising out of improper storage of the appliance at the Customer's premises.


SAFETY PRECAUTIONS

- Do not expose the washing machine to direct sun light or rain.
- Do not install the washing machine near a damp place.
- Do not sprinkle water over switches.
- Let water drain away from the drain hose thoroughly.
- When plugging out the power cord, do not hold the wire.
- Keep children away from the washing machine.
- Keep the washing machine away from fire or heat source such as heater, candle, cigarette etc.
- Do not wipe the washing machine with volatile material, gasoline, etc.
- Do not pour over 50°C water into the tub.

The appliance is to be connected to the water mains using new hose-sets and old hose-sets should not be reused.

PREPARATION BEFORE WASH

- Be sure to remove things such as keys, pins and coins from the laundry.
- Wash oily or dyed laundry separately.
- Wash fuzzy laundry by turning it inside out.
- Wash delicate clothes, wrapping them in a nylon net.
- Insert the power plug into the power socket.
- Let the drain hose stay down.
- Connect the inlet hose.

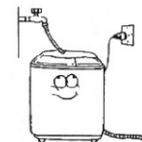

OPERATING INSTRUCTIONS

WASH

- Step A**
- Put the appropriate amount of detergent in tub depending on the amount of laundry.
 - Put the laundry in the tub and add water upto the desired water level depending on the laundry to be washed.
 - Select the wash program GENTLE, NORMAL or STRONG according to the kind and quality of laundry. Recommend to use SOAK program for heavily soiled laundry.



Set the desired wash time by turning the knob clockwise (refer table below for time selection)

Fabric Type	Woolen	Cotton, Workclothes, Linen	Heavily soiled cotton clothes
Wash Time	3-6 min	10-15 min	35 min



After washing is complete, drain the water by setting the WASH-DRAIN selector knob to DRAIN position.
Note: The clothes should rotate freely during the washing for better results. Reduce the clothes load / increase the water level to achieve the free movement of clothes.

Soak Function

- Soaking is provided for better cleaning of clothes as detergent water goes to inner pores of clothes resulting dirt removal and better wash.
- Soak time by default will be 20 min. So total time of cycle will be Soak + Wash time (20 min + wash time).
- In soak option, machine operate for 2 min and remain off for 5 min. This cycle continues for selected soak time.

WARRANTY CARD

Machine Sl. No.:	
Model :	
Dealer's Name :	
Address :	
Date of Purchase :	
Date of Expiry :	
	Stamp of Dealer