


Owner's Manual

FULLY AUTOMATIC WASHING MACHINE

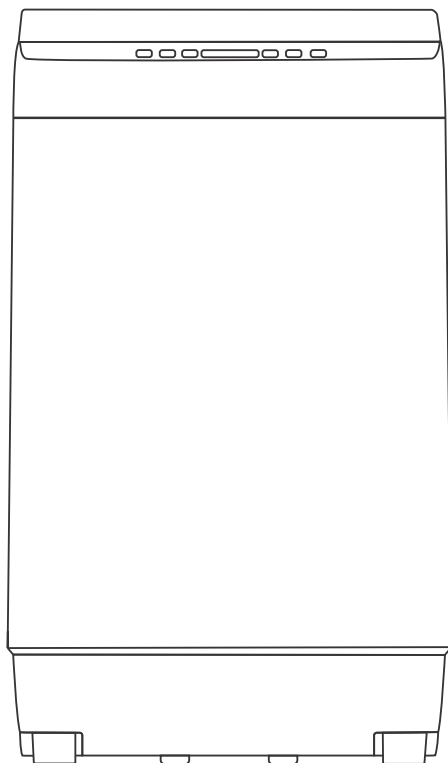

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings. These warnings have been provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance.


Contents

Before Using

Parts name.....	1
Cautions.....	2
Installation and adjustment.....	4
How to use drainpipe.....	5
Water inlet installation.....	6

Operation

Preparation before operation.....	8
Load Laundries.....	9
Use of detergent.....	9
Control panel instructions.....	10
Operation steps.....	12
Maintenance.....	13
Troubleshooting	14
Other functions.....	15
Specification.....	16
RoHS Decleration.....	17
Warranty.....	18

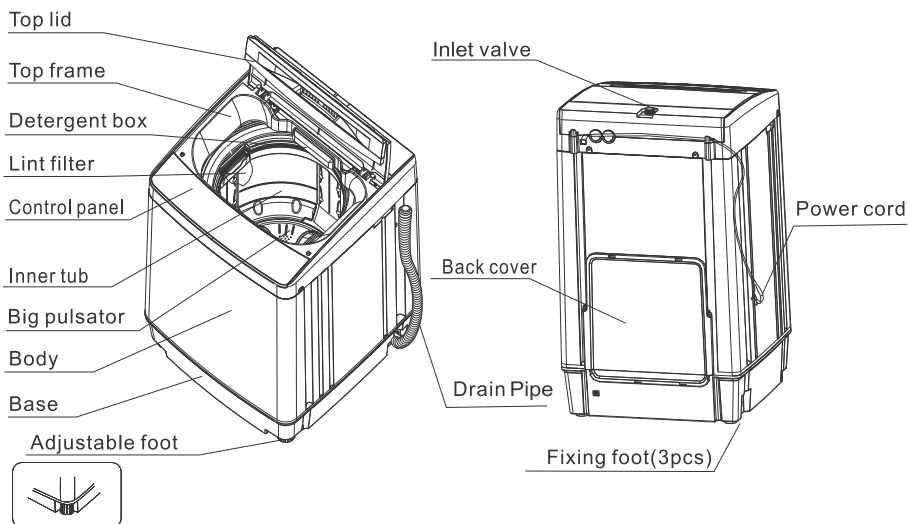

Accessories

Bottom cover (1pc)	Water inlet hose (1pc) water inlet hose connector(1pc)

Symbol definition

Warning symbols 	Pay special attention to the warning symbols. There may be serous risks to personal body safety or damages to the washingmachine if not follow.
Forbidden symbols 	Please stop doing the contents with this symbol, otherwise it will damage the appliance or injure your personal body.


Cautions

Before using

Please insert the plug into the power socket with rated voltage 240V A/C.




Always unplug the appliance and turn off the water when the power is cut, moving or cleaning the washing machine, or it is not in use. Do not insert or pull off the plug with wet hand.

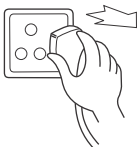

Do not make the electric cable bended, stretched, twisted, strapped or changed, pressed or nipped. If the electric cable or plug is damaged or the socket becomes loose, they must be repaired or changed by our appointed repair stations or the professionals of our post-sale service department to avoid danger. The pin of the plug must remain clean. Please clean it carefully with dry cloth if it is dirty.




Don't install the washing machine in bathroom or damp places. Do not wash the machine with water, do not put wet clothes on the control panel film.

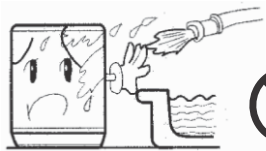

Do not use water hotter than 50°C.




If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.

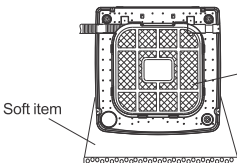

Do not wash raincoat, bike cover, feather dress and such waterproof laundries, which will make the washing machine abnormal vibrations during spinning.



Do not share the same socket with other electric appliances. Do not use the damaged plug or loose socket.

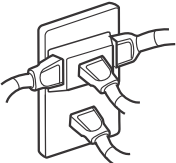

Cautions

Before using

Do not put hands into the working machine. It is dangerous even if the speed is very slow. Take special care of the children, and forbid them to climb on the washing machine.




It is dangerous to alter the specifications or attempt to modify this product in any way.



Do not overload the appliance or put any hot goods (such as the kettle with hot water) on the washing machine.




Garments which have been in contact with volatile petroleum products should not be machine washed.

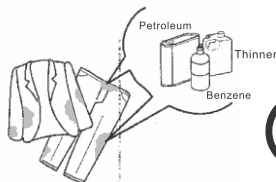

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

 
Children should be supervised to ensure that they do not play with the appliance.



Keep the appliance away from direct sunlight and heat sources like the heater.



To prevent the lint from blocking cascade outlet during washing, please keep the lint filter in good condition, install it to proper position and clean it in time.

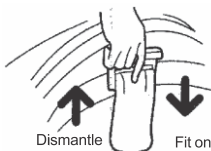

Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.



- Before washing, please ensure the tap is open and the inlet hose is installed properly.
- It is suggested to use low foam washing powder.

Installation and adjustment

Before using

Please install and adjust the machine according to the requirements of the manual.
It is very important to your safety and correct operation.


Unpacking

- Unpack the carton and take out the bottom panel.
- Open the top lid of washing machine and take out all of the accessories.
- Remove all wrappers, including the polystyrene base.

You are advised to keep all the packaging for reuse in case the machine is to be transported again.

Installing the bottom cover

- Let the back of washing machine incline forward make the side of bottom cover with sticker description back to washing machine, insert to the bottom of washing machine along the direction of arrow.
- Remove two fixing clamp by scissors, insert to the accordingly holes red lines indicating, gently pull fixing clamp should not be pulled out, make the bottom cover fixed on the base.

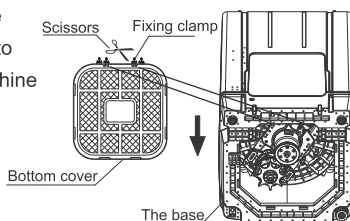


Positioning

The distance between the washing machine and the wall should be more than 50mm, and the maximum allowed angle of the shank base of the machine is 1° . The slanting or rough ground may cause operating stopped or unstable, please adjust it with the following methods:


- Make it horizontal

Use a tied thread with plumb to check if it is horizontal.

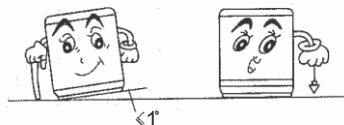

- Adjust the adjustable foot

 1. Lift up the adjustable foot gently, loose the adjustable nut and twist the adjustable foot.
2. Fasten the nut after adjustment.




How to use drain pipe


Before using

How to change the direction of the drain pipe


1. make the front of washing machine down, slightly put down, put off two fixing clamp by pliers, put off the bottom cover.

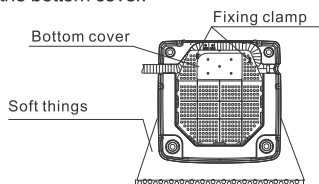


2. Draw the drain hose from back groove.

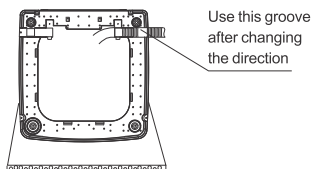

3. Protrude the drainpipe from right side, then install the anti-rat.

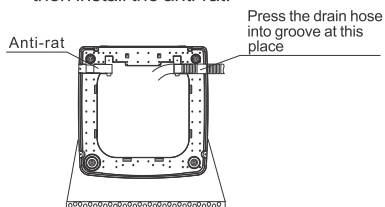


4. install bottom cover (cut the other two fixing clips by scissors, insert them to the holes between bottom cover and base, fix the bottom, refer to the method as mentioned earlier) Raise the washing machine gently

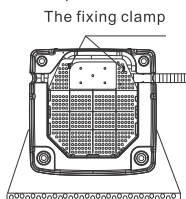


Water drainage

The drain hose should drain smoothly


1. The height of the drainpipe should be less than 10cm, otherwise the drainage will not be smooth and need a long time to drain, the machine may stop during working.
2. Do not step on or press the drainpipe.

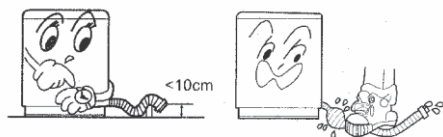

3. Cut the drain pipe if it is too long. Cut the front end of the hose slantingly to make drainage smoothly.

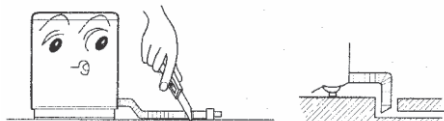



4. Purchase a proper hose if you need additional drain pipe. Its diameter should not less than 30mm and length should not exceed 1.5m.

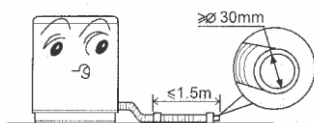

If the additional drainpipe is too long, cut some at A or B point.



Tap selection

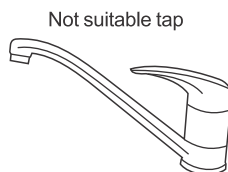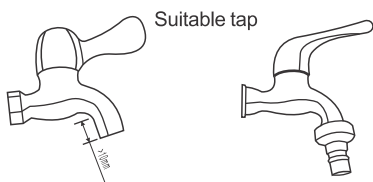

The front end should be longer than 10mm The tap exit end face should be flat and smooth, if not file it to avoid leakage

Connect the inlet hose connector with the tap

- 1) Press the lower end of the lock lever and push down the slider, take off the inlet hose connector from the inlet hose, see illustration 1.
- 2) Loosen the four bolts on the inlet hose connector till the tap can be accessed, then set the inlet hose connector in the tap, see illustration 2. (if the tap caliber is too larger and could not set the inlet hose end, unscrew the four bolts and take out the bushing, tap exit end must flat, otherwise it will leak, see illustration 3)

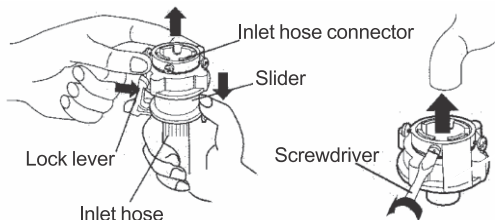


Illustration 1

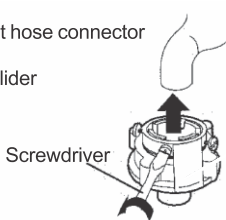


Illustration 2

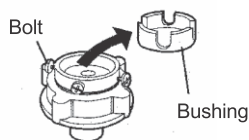


Illustration 3

- 3) Fasten the four bolts in the inlet hose connector evenly, see illustration 4.

- 4) Twist the fastening nut as the illustration, see illustration 5.

Remark before twisting the nut, the threading is about 4mm above the upper surface of the nut, after twisting, the threading is less than 2mm above the upper surface of the nut, see illustration 6.

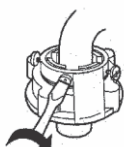


Illustration 4

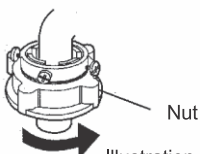


Illustration 5

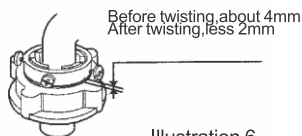



Illustration 6

Water inlet installation

Before using

Connect the inlet hose with the washing machine


1. Do not take off the water absorption cushion. Please check if the cushion is dropped or damaged before each usage. If it is, contact the seller immediately.
2. Put the inlet hose nut on the inlet valve connector.
3. Fasten the inlet hose nut and swing it gently to make sue if it is suitable.

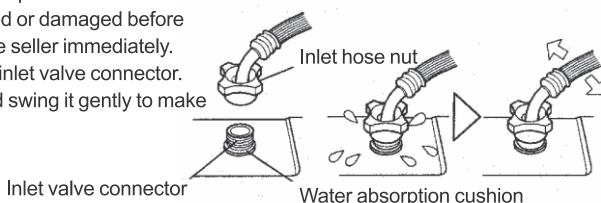

Cautions: When install the washing machine, please use the new hose assy along with the washing machine, old hose assy can not reuse.


Connect the inlet hose connector with the inlet hose

1. Push down the slider, insert the inlet hose into the connector
2. Hang the lock lever to the inlet hose connector and release the slider till a click sound is heard.

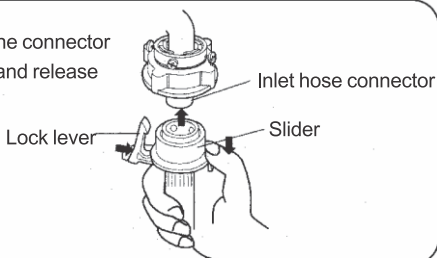


Check the connection between inlet hose connector and the tap

1. Swing the inlet hose gently to confirm if it is fastened.
2. After installation, open the tap and check if it leaks.
3. Do not bend the inlet hose with overstrain.
4. Before each usage, check the connection between inlet hose connector and the tap, and the installation of inlet hose. Make sure they are firmly fitted to prevent dropping from improper installation position.

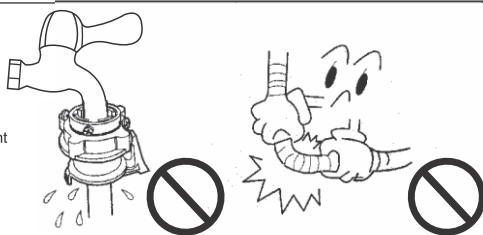

Dismantle the inlet hose

1. Close the tap.
2. Press the locking lever, push down the slider, and pull of the inlet hose. If the machine is used frequently, the connector of the inlet hose can be kept on the tap to prevent damaging the fixing screw.

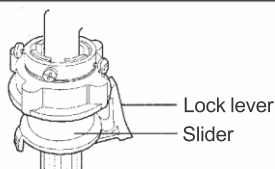


Preparation before operation

Operation

Preparation before washing

- 1. Connect the inlet hose and open the tap.
- 2. This appliance must be earthed. Confirm the socket is earthed reliably and insert the power plug. The earth terminal should not link to gas pipeline, tap pipeline etc.
- 3. Put down the drainpipe.

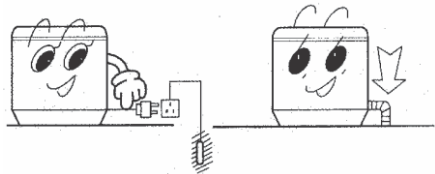

Warning: the temperature of the water should less than 50°C

Before washing the laundries, please pay attention to the followings:

Make sure if there is special requirements for the laundries	Before washing, empty all pockets of small objects which may have been left inside (coins,keys,screws etc.) As these could damage the drain pump.	Knot the long band, fasten the buttons and close the zippers.	Do not overload the machine. Load the laundry loosely alternating large items with small ones.	Sort the laundry according to the type of fabric, color-fastness and how dirty it is. Put thin laundries, woolens and such prone to wear and tear laundries into washing bag.


- A. Make sure the laundries are washable.
- B. It is essential to wash new colored items separately when washing for the first time. White items should not be washed with colored items.
- C. Please immerge the non-absorbable laundries by hand.
- D. Some stains such as fruit, wine, grass, rust etc. are difficult to remove and should be treated before washing with specific products, which can be found in most household shops. In some cases it may help to soak the stain before washing with a special pre-soak product or biological detergent.
- E. Overturn the nap fabric and long floss laundries before putting them into the machine.
- F. Do not put the laundries polluted by chemicals into the machine directly.
- G. Very small item(handkerchiefs, ribbons, socks etc) should be washed in a washing bag or a pillow case.



- The capacity of washing and spinning of the machine refer to the largest weight of the standard laundries under dry condition. Washing quantity shall be lower than the rated capacity.
- Different thickness, size and type of the laundries will influence the actual washing capacity. It is suitable that the laundries can be turned round normally during washing.
- Do not select high water level when laundries are less than 1.0kg to avoid water splashing. the lowest water level only can wash clothes less than 0.5kg

Use of detergent

Detergent box

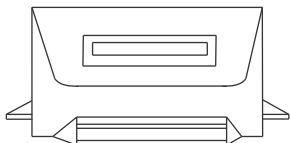

- Withdraw the dispenser box before adding detergent
- Pour concentrated synthetic washing powder into the box directly as shown in the left illustration.
- The dosage of the washing powder, please refer to below.
- It is suggested to use low sud washing powder.

How to use the washing powder

How to use bleach

- Fill water to the selected level, dilute the bleach in the container, and pour it slowly into the washing tub.
- Do not use bleach for colored or figured laundries as they are prone to lose colors.
- Do not put bleach to laundries directly.
- Refer to the manual for the usage and quantity of the bleach.
- Please dissolve powder bleach before use.


- Dissolve in the machine directly not suitable for preset program.
 1. Low water level.
 2. Add the washing powder, and run for 30 seconds to dissolve it completely.
 3. Put laundries in, select suitable water level.
- The instant dissolving of the washing powder
 1. Prepare warm water of 30°C in a container.
 2. Pour the powder while stirring to fully dissolve it.
- The washing powder is more prone to pollute the laundries than the detergent, therefore, please use it with proper quantity.
- Washing powder with poor quality or not used for a long period may get blocked, please clean the detergent box in time.

- It is suggested to use low foam washing powder
- For the quantity of the concentrated washing powder, please refer to its manual
- Remarks avoid splashing of water and waste of washing powder, water level should not be too high if laundries are too small.

Control panel instruction

Mode and meaning of the indicator light on: indicate the selected mode

- At the beginning of start, the program is "normal",press " PROGRAM " buttoon choose different programs. When choose the left five programs ("Normal", "Spin", "Heavy", "Eco Wash", "Quick Wash"),the light will be on,when press the right 5 programs("Wash", "Rine/Spin", "Water Recycle", "Air Dry", "Tub Clean"), the light will flash .

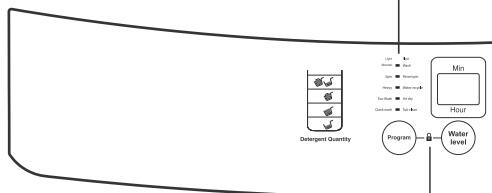


- During the machine working, press "WATER LEVEL" and "PROGRAM" buttons to set "child-lock", the digital timer displays remaining time and "CL" alternately press "WATER LEVEL" and "PROGRAM" buttons again to cancel child-lock.
- Once child-lock function is set, all the buttons will be locked including power switch. If open the top lid during the machine working, the machine will stop working and give an alarm. If open the top lid but close in 5 seconds, the machine will stop alarm and continue to work. If open the top lid and do not close in 5 seconds, the machine will start draining if there is water in the inner tub, and give an alarm, the machine will drain out the water and in the state of waiting(during draining even close the top lid ,the draining will not stop. If cancel the child-lock function, the draining will stop),the machine will give an alarm every 10 minutes
- After setting child-lock function,during wash or rinse process,if open the top lid for 5 seconds (there is water in the inner tub),the machine will start draining and give an alarm, if cancel the child-lock function during draining, the machine will inlet water to the setting water level and continue to work.

At the beginning of start state:

- Put through the power, press POWER button, the machine is in the state of beginning of start:
 - if there is no water in inner tub,the machine is under the status of FUZZY, the PROCESS is " wash-rinse-spin", digital timer displays "-", water level is not setting, PROGRAM is"ECO WASH" If press " START/PAUSE " directly(press "PROGRAM" to choose WASH, the machie is also under the status of FUZZY, the machine will start FUZZY sense and detect the weight of laundry, set the water level automatically.
 - If there is water in inner tub, the machine is under the status of non-fuzzy, process is "WASH-RINSE-SPIN", digital timer displays program time, water level is "7" (if press "WATER LEVEL", the digital timer displays "7"), program is "ECO WASH"

- Digital timer displays program code
- If selected AIR DRY, the digital timer displays air dry time, unit is MIN.
- When washing, the digital timer shows the rest time of washing, unit is MIN.
- When trouble encountered, the digital time shows trouble code.

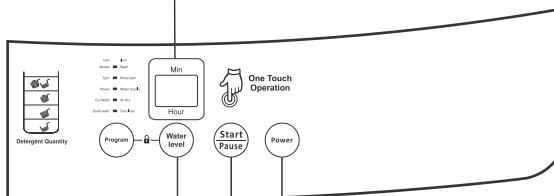

● To control the washing machine is in working state or waiting state.

- After select program and water level, press this button to start.
- Press this button to pause during working, press again will rework .

- At the beginning of start, press " WATER LEVEL" to set water level, the digital timer displays from "1" to "10", it is water level 1 to water level 10. At the status, the water level is "7", 1-2 is less water level , 3-4 is low water level, 5-8 is middle water level, 9-10 is high water level
- During wash (including rinse), if need to add water, press "WATER LEVEL" button to add water, un-press will stop adding. Or PAUSE the washing machine and press " WATER LEVEL" to select higher water level, then press "START/PAUSE" button, The washing machine will add the water to setting level automatically and continue working. If your resetting water level is lower than present water level, the lower water Level will valid in next water inlet.
- Automatically add water: during WASH and RINSE process, if the washing machine check the water level is lower than setting water level, The washing machine will pause and add water to setting water level automatically.

Operation steps

1. Put through the power, press POWER button, the machine is in the state of beginning of start:
 - a. If there is no water in inner tub, the machine is under the status of FUZZY the PROCESS is "wash-rinse-spin", digital timer displays "--", water level is not setting, PROGRAM is ECO WASH. If press "START/PAUSE" directly (press "PROGRAM" to choose WASH), the machine is also under the status of FUZZY, the machine will start FUZZY sense and detect the weight of laundry, set the water level automatically
 - b. If there is water in inner tub, the machine is under the status of non-fuzzy, process is "WASH-RINSE-SPIN", digital timer displays program time, water level is "7" (if press "WATERLEVEL", the digital timer displays "7"), program is "ECO WASH".
2. When the machine enters the initial working state, press "program" button, choose different programs. When choose the left five programs ("Normal", "Spin", "Heavy", "Eco Wash", "Quick Wash"), the light will be on, when press the right 5 programs ("Wash", "Rinse/Spin", "Water Recycle", "Air Dry", "Tub Clean"), the light will flash.
3. Press the "water level" button to choose level, the digital tube will display 1-10 water level, initial level is "7", choose right water level according to the amount of clothes. When choose "spin" "air dry" "tub clean", program, the "water level" button is invalid.
4. Close the top lid, and press "Start/Pause" button, the machine will start working. During working, pressing and holding "WaterLevel" button and "program" button can start child-lock function, the digital timer displays remaining time and "CL" alternately, press again to release child-lock. After start child lock function, if open top lid, the machine will stop working and give an alarm.
5. If you open the lid during spinning, the washing machine will stop running and alarm, close the top lid, disarm the alarm, need to press "start/pause" to continue running.
6. After the laundry process is over, the buzzer will sound and the washing machine will automatically power off.

Maintenance methods

After the end of the programme

- The machine stops automatically, and music buzzer will remind you to take out the laundries or start again.
- Once you have finished using the machine, you are advised to unplug it and turn off the water taps to avoid unexpected leak or fire.

 
External cleaning

Clean the exterior cabinet of the appliance with soft cloth. Do not use cleanser, volatile chemical materials to clean the machine, which will damage plastic parts and the surface.



● Lint/Magic filter Cleaning

After each wash cycle please clean the Lint/Magic filters as shown to prevent lint from cascade blocking. Clean the Bag type (Lint filter A) & or Magic Filter (Lint Filter B) under running tap water after every wash cycle regularly.



● Lint Filter A Cleaning


1. Pull out the lint filter A.
2. Turn the lint filter A net outside and wash it.
3. Recover the lint filter A net and remount it.

Groove

● Lint Filter B Cleaning

1. Pull out the lint filter B, (see Illustration 1)
2. Open the lint filter B and wash it, (see Illustration 2)
3. Close the lint filter B and install it to proper position.


Press it and pull out the lint filter B

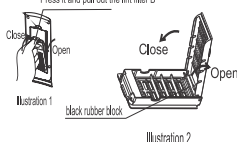

Clean inlet gate

It is possible that the inlet filter net can be blocked by the dust, please clean it according to the follow steps:

1. Close the tap and turn on the power switch.
2. Start the washing machine for 5 seconds (make the water in the inlet hose flows to the tub), and cut off the powersupply.
3. Pull off the inlet hose, remove and clean the inlet valve and the inlet net, and install again.

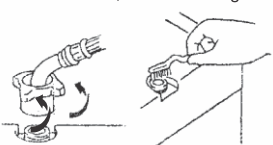

1. Once you have used the machine, you are advised to turn off the water taps. (if necessary, pull out the inlet hose)
2. Do not keep water in tub for a long time. When washing is finished, drain it right away.
3. Once you have finished using the machine, you are advised to unplug it.
4. Put the electric cable and the drain hose in order.
5. Wipe the water on the surface and in tub with soft cloth and keep the top lid opening for a while. It helps to prevent mould and stagnant smells forming inside the appliance.

If the water in the inner tub has possibility to freeze, please do like below:

1. In winter, if remaining water freeze can cause the washing machine trouble, please take off the water inlet hose and drain out the water in the hose and inner tub.
2. If the water freeze, please don't operate the washing machine. Put 40j hot water in the tub, the hot water should submerge the pulsator, after a few minutes, rotate the pulsator by hand gently, then you can operate the washing machine.

Trouble shooting

Before contacting the technicians, please make the following checks:

Issue Phenomenon	Potential Cause	Solution
No Display on control panel	Plug not inserted properly	Remove and insert the plug properly / tightly
	No power supply in the socket	check supply in socket or try changing to another socket
	Switch is not turned ON	Turn on the power switch
	Power supply cut off	Check and ensure there is power supply available
Leakage in water inlet pipe	Inlet pipe is not connected properly with the tap	Fix the pipe tightly onto the tap
	Inlet pipe and inlet valve connection is loose	Tighten the inlet pipe on the valve.
Water not draining out	Drain pipe is not on the floor	If drain pipe is hanging on the machine, put it down on the floor
	Drain pipe is bend / blocked	straighten the pipe / clean the drain pipe for any blockage
No / low water inlet through inlet pipe	No water supply in the tap	Run machine when water supply resumes
	Tap is not opened	Open the tap and try again
	Blockage in inlet pipe	clean the inlet pipe and clear blockage
	Blockage in Inlet valve	Clean the filter of inlet valve and try again
Machine stops spinning and starts water inlet at the time of spin function	Clothes are unbalanced in the machine	Machine will take water and automatically balance the clothes
	More cloth load than capacity	Take out some clothes and use loth load as per machine capacity
	Machine is not stable / machine is tilt	Adjust the machine position using adjustable foot.
Spin is intermittent during spin function	This can happen if the laundries are not balanced	This is normal, machine will balance the clothes automatically and spin.
There is water coming out from the drain pipe at the time of 1st use	Residual water remaining from factory inspection	This is normal, after performance inspection in factory, some water might be remaining in the machine.

● Notes: If there is still a fault after the above checks, please pull out the plug and contact the customer care right away. It is dangerous to repair this product by yourself.

Other functions

1. Give an alarm

Display	Explanation	Settlement
E1	After draining 5 minutes, it still does not reach to water level	Open top lid and then close it to clear up the alarm.
E2	The top lid is open when spinning	Close the top lid to clear up the alarm
E3	Spin does not balance	Open the top lid ,make the laundries place equally, then close it to clear up the alarm
E4	After inlet 20 minutes still not reach to setting water level	Open top lid and then close it to clear up the alarm.
E5	The top lid is opened after setting child-lock	Close the top lid to clear up the alarm
F1	Water level sensor is wrong	Stop the power supply and call the brand authorized service desk

If problem is not resolved with troubleshooting, please contact the brand service helpline

2. Imbalance adjustment

During spinning, if the laundries are not placed equally in the tub, it would cause heavy vibration. This machine has imbalance adjustment function, and the vibration testing system will supervise the running. Once vibration is beyond certain level, the adjustment system will start automatically to adjust the imbalance.

3. Power supply is cut off automatically

- A) Press the power supply button and does not start the program in 10 minutes, the power supply will be cut off automatically.
- B) After the washing is finished, buzzer will remind, the power supply can be cut off automatically.

4. Child lock function

- A) If set child lock function, all the buttons will be locked including POWER. If the top lid is opened during the washing machine working, the washing will be stopped and give an alarm. But if you can close the top lid in 5 seconds, the washing machine will stop alarm and continue working. If can not close the top lid in 5 seconds, the washing machine will begin draining if there is water in the inner tub ,even closing the top lid is not valid. During the draining, alarm will be given every 10 seconds , when the water in the inner tub is about 5cm higher, alarm will be given every 10 minutes (alarm is always given) . When the draining is finished, the washing machine will be in the state of waiting, if close the top lid, the washing machine is unlocked and start working as previous setting.
- B) Once child lock is set, if open top lid over 5 seconds during washing or rinse (there is water in the inner tub), washing machine will drain and give an alarm. If you unlock the function during draining, the washing machine will add water to setting water level and continue working.

5. Water Recycle Function

Set Water Recycle function, the machine will not drain and spin after the last rinse, the digital timer display EE code, Spin indicator light flashing and alarm, the machine stop working (if no operation, buzzer alarm every 10 minutes, and power cut off after one hour), press Start/Pause button, the digital timer displays the remaining time, enter the process of drain, spin again, the water in the stainless steel inner tub can be reused.

Specification

Model	FABRIC CARE	
Rated voltage and frequency	230V~50Hz	
Rated capacity of wash and spin	6.5 kg	7.5 kg
Water level/ Water volume about	10/58L, 9/54L, 8/50L, 7/47L, 6/41L, 5/38L, 4/35L, 3/32L, 2/29L, 1/26L	
Inlet pressure	0.03MPa~0.85MPa	
Rated input power	Wash 375 W Spin 275 W	Wash 400W Spin 300W
Weight	29 kg	29.2 kg
Dimensions (LxWxD)	547 X 563 X 924 mm	547 x 563 x 943 mm

Disposal & RoHS Declaration

This product is ROHS compliant



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device for environmental safe recycling please use the collection systems or contact the brand help desk.

RoHS
COMPLIANT

Warranty Terms & Conditions

Customer Privileges.

WARRANTY

Standard warranty period 2 years

**Extended Warranty Period (applicable only on the parts mentioned below
3 years (only on motor))**

1. The warranty is confirmed only to the first purchase of the appliance and is non-transferable. This warranty card and purchase bill shall be presented to our staff at the time of service and the warranty shall be void if the warranty card is altered/tampered with or lost.
2. The warranty period (both standard Warranty Period and Extended Warranty Period) starts from the date of purchase of appliance and shall be available to products installed within municipal limits.
3. The warranty covers only manufacturing defect in material that may arise despite normal operation and usage of the appliance in accordance with the user manual.
4. Repairs, installations & removal of the appliance shall be got carried out only by an Authorized Service Personnel, failing which warranty will be void.
5. In the event of change of address and contact details, the new address and the new contact details shall be intimated to the Authorized Service Center on the given toll free number for ensuring proper installation. Charges shall be applicable and borne and paid by customer.
6. Repairs &/or replacement of parts covered under warranty would be purely at the sole discretion of the Company & Authorized Service center Head only.
7. In the event of a part covered under warranty / wash motor required to be repaired then our person's obligation will be to repair such part / wash motor to restore the product to working condition.
8. The company's obligation in respect of parts covered under warranty in event where repair is not possible shall be to provide replacement of defective parts with a functionally working condition.
9. It is hereby clarified that on expiry of Standard Warranty Period, visiting charges will be applicable for all visits and the same will be borne by the customer. In the Extended Warranty Period, in case the product needs to be transported to the Authorized Service Center for repair, the transportation charges from and to the place of installation shall be borne and paid by the customer.
10. The customer shall provide a reasonable, sufficient and safe working space to access the appliance for service. The customer is liable to move away all blocking objects or move the appliance to an appropriate location with electricity / gas / water supply and drainage for testing of the appliance.
11. In case of appliance requires to be repaired at service center, all expenses incurred in transportation of the appliance or parts thereof from and to the company's Authorized Service Center, as well as expenses incurred on deputation of service personnel/technician towards conveyance, inspection and other incidental expenses, will be borne and paid by the customer.
12. In case of repairs the replaced spare part will be warranted only for the unexpired period of the warranty.
13. The company shall be under no obligation or deemed to be in default or liable for cost, compensation, damage, penalty, fine, or otherwise on account of delay or failure in performance resulting from causes beyond its reasonable control (e.g. strikes, floods, earthquakes etc.) including but not limited to delay in servicing due to non-availability of spare parts and/or accessories.
14. The defective part shall belong to the company.
15. Warranty issued is subject to purchase from authorized dealers and repair by company's authorized service center only.
16. Dispute if any in respect of Warranty shall be subject to exclusive jurisdiction of Mumbai court irrespective of the point of sale.

Warranty is not applicable in any of the following cases :


1. If the warranty card is not duly filled and does not bear the stamp, date and signature of the authorized Dealer.
2. The warranty does not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly as a result of appliance failure, breakdown, or accident or usage of the Appliance not in accordance with the operating / user manual.
3. Warranty is not applicable on plastic parts, electrical parts, top, lid, assembly, control panel, window, knobs, nut, bolts, drain pipe, cabinet, dispenser assembly, drain hose, filter, castors, wheels, foot, drum, body of the washing machine and washer. The warranty does not cover consumables, normal wear & tear parts, plastic, glass and/or rubber parts, operational parts and accessories.
4. If the Appliance has been subjected to improper use such as operated on trolley other than the one, if any

WARRANTY CARD

Machine Sl. No.: _____	Stamp of Dealer
Model : _____	
Dealer's Name : _____	
Address : _____	

Date of Purchase : _____	
Date of Expiry : _____	

* CONDITIONS APPLY AS DESCRIBED IN MANUAL

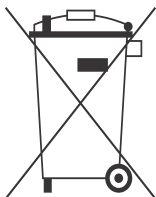

As per the Government of India's E-Waste Management Rule 2016, End of Life Products intended to be discarded should be channelized for dismantling and recycling through authorized dismantler and recycler only, to ensure environmentally sound management of E-Waste.

It cannot be disposed off with the general Household Waste so as to prevent any damage to the environment.

To facilitate return of End of Life product visit our website www.onida.com for details or contact nearest authorized Service Center.

We request you to support us in our endeavour to ensure an environment friendly nation.

The model(s) mentioned in this user manual comply with RoHS regulations as per 'E-Waste (Management) Rules, 2016'.

Save Environment : Do not throw packaging waste of Plastic and Expanded Polystyrene (Thermocol) anywhere. Deposit it in collection center or return it to MPCB/CPCB approved Recycler.



MIRC ELECTRONICS LIMITED,

ONIDA HOUSE, G-1, MIDC,
MAHAKALI CAVES ROAD, (EAST), MUMBAI 400 093
INDIA
www.onida.com