

## REFERENCE

**TABLE 1. WEIGHT GUIDE FOR CLOTHES**

Type of clothing	Type of fabric	Weight per piece
Under shirt	Cotton	150 g
Handkerchief	Cotton	50 g
Bath towel	Cotton	300 g
Shirt	Mixed fabric	200 g
Socks (1 pair)	Mixed fabric	50 g
Pajama (shirt and pants)	Cotton	500 g
Winter undershirt	Cotton	600 g
Workclothes	Mixed fabric	800 g
Blouse	Mixed fabric	200 g

★ Check coloured clothes for colour bleeding before mixing with white or light coloured clothes.

**TABLE 2. GUIDE FOR WASHING**

Type of fabric	Wash time	Amount of laundry	Amount of water approx	Amount of detergent
Synthetics, Silk, Woolen, Knits	3~6 min.	0.5~2.0 kg	25L	30g
		2.0~5.0 kg	33L	45g
		5.0~9.0 kg	50L	60g
Cotton, Linen	6~9 min.	0.5~2.0 kg	25L	30g
		2.0~4.0 kg	33L	45g
		4.0~5.5 kg	50L	60g
Very soiled cotton and linen	12~15 min.	0.5~2.0 kg	25L	30g
		2.0~4.0 kg	33L	45g
		4.0~6.0 kg	50L	60g
		Above 6kg	Max. Water level	As per req.

**Notes:**

- Amount of laundry is the weight of dry laundry. For getting optimum washing performance put approx. 60% of rated capacity load.
- When the wash load and water volume are not matched, clothes damage/water splash may occur.
- The quantity of wash load varies depending on fabric type, thickness and size of the clothes. Adjust the water level/wash load as required by carefully watching the movement of clothes in the tub.

6

## CARE AND MAINTENANCE

Be sure to disconnect the power cord from the electric outlet before starting care and maintenance.

### Washing Machine

- If the washing machine itself becomes dirty : The washing machine can be cleaned with a mild liquid detergent. Never use abrasive cleanser or chemicals such as benzene or thinner to clean the washing machine, because these materials will damage both the painted surfaces and the plastic parts.

### Pulsator

- If a button or some other object gets caught in the pulsator :
  - Use a screwdriver to loosen the screw in the center of the pulsator and lift the pulsator straight up in order to remove the button or other object.
  - Put the pulsator back to its original position and tighten the screw.

## TROUBLESHOOTING GUIDE

### Before Requesting Service

Troubles	Checking Points
Motors do not operate	<ul style="list-style-type: none"> <li>Is the power cord firmly plugged in ?</li> <li>Is the timer turned to a suitable point except "OFF"?</li> </ul>
No draining	<ul style="list-style-type: none"> <li>Is the lint stuck into the drain valve?</li> <li>Is the end of the drain hose guide located at a excessive height?</li> </ul>

7

## SAFETY MEASURES

please note the following safety precautions and maintenance suggestions.

WARNING	
<b>In Operation</b> <ul style="list-style-type: none"> <li>Do not insert the hand inside the Washer while the machine is in operation. (Do not let children climb on the machine or climb into the tub. It may cause injury)</li> </ul> 	<b>Installation Area</b> <ul style="list-style-type: none"> <li>Avoid area exposed to snow, rain, or where humidity is high. It may cause electric shock.</li> </ul> 
<b>Switch Area</b> <ul style="list-style-type: none"> <li>Avoid watering on the switch area. It may cause electric shock or fire.</li> </ul> 	<b>Electric Outlet</b> <ul style="list-style-type: none"> <li>Avoid connecting several electric devices to single outlets. It may cause fire.</li> </ul> 
<b>Volatile Material</b> <ul style="list-style-type: none"> <li>Do not use volatile material such as Benzene, Gasoline, bug killer. Do not leave strong alkaline substance such as bleach inside the tub. These may damage plastic surface and rubber parts.</li> </ul> 	<b>Heat</b> <ul style="list-style-type: none"> <li>Avoid electric heater, candle light, cigarette light, bug smoke, etc. near the machine. It may ignite or deform plastic part.</li> </ul> 

8

 


## USER'S MANUAL



Part No. 11083922

## SAFETY MEASURES

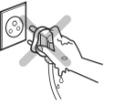CAUTION	
<b>Hot Water</b> <ul style="list-style-type: none"> <li>Avoid using hot water above 50°C. It may deform plastic parts or cause malfunction.</li> </ul> 	<b>Installation</b> <ul style="list-style-type: none"> <li>Install the washing machine on a horizontal support. Otherwise, it may cause vibration and noise.</li> </ul> 
<b>Power Cord</b> <ul style="list-style-type: none"> <li>Do not treat the power supply cord with your wet hand.</li> </ul> 	<ul style="list-style-type: none"> <li>Plug out the power supply cord when cleaning or not using the washing machine for a long time.</li> </ul> 

9

## SPECIFICATIONS

Product	Semi-Automatic Single Tub Washing Machine			
Rating	230V, 50Hz AC			
Input Power	Wash 270 W	Wash 300 W	Wash 410W	Wash 460W
Capacity	6.5 Kg	7.0 Kg	8.0 Kg	9.0 Kg
Inlet Water Pressure	1 ~ 5 Kg/cm <sup>2</sup>	1 ~ 5 Kg/cm <sup>2</sup>	1 ~ 5 Kg/cm <sup>2</sup>	1 ~ 5 Kg/cm <sup>2</sup>
Net Weight	12.0 Kg	12.0 Kg	12.3 Kg	12.6 Kg
Dimension (WxDxH)	490 x 460 x 890 mm	490 x 460 x 890 mm	490 x 460 x 890 mm	490 x 460 x 940 mm



The model(s) mentioned in this user manual comply with RoHS regulations as per 'E-Waste (Management) Rules, 2022'.

**Note:** In our strive for continuous improvement and development at Onida, the appearance & specifications are subject to change without prior notice. The graphics shown in the manual are schematic and it is possible that they do not conform to your washing machine.

10



MANUFACTURED & MARKETED BY :  
**MIRC ELECTRONICS LIMITED**  
 ONIDA HOUSE, G-1, MIDC, MAHAKALI CAVES ROAD,  
 ANDHERI (EAST), MUMBAI 400 093  
 INDIA  
[www.onida.com](http://www.onida.com)

11

## WARRANTY

Standard Warranty period  
1 years

Extended Warranty Period (applicable only on the parts mentioned below)  
6 years (only on wash motor)

### Customer Privileges.

- The warranty is confirmed only to the first purchase of the appliance and is non-transferable. This warranty card and purchase bill shall be presented to our staff at the time of service and the warranty shall be void if the warranty card is altered/tampered with or lost.
- The warranty period (both standard Warranty Period and Extended Warranty Period) starts from the date of purchase of the appliance and shall be available to products installed within municipal limits.
- The warranty covers only manufacturing defect in material that may arise despite normal operation and usage of the appliance in accordance with the user manual.
- Repairs, installations & removal of the appliance shall be got carried out only by an Authorized Service Personnel, failing which warranty will be void.
- In the event of change of address and contact details, the new address and the new contact details shall be intimated to the Authorised Service Center on the given toll free number for ensuring proper installation, Charges shall be applicable and borne and paid by customer.
- Repairs &/or replacement of parts covered under warranty would be purely at the sole discretion of the Company & Authorised Service centre Head only.
- In the event of a part covered under warranty / wash motor required to be repaired then our person's obligation will be to repair such part/ wash motor to restore the product to working condition.
- The company's obligation in respect of parts covered under warranty in event where repair is not possible shall be to provide replacement of defective parts with a functionally working part / wash motor of any brand/make.
- It is hereby clarified that on expiry of Standard Warranty Period, visiting charges will be applicable for all visits and the same will be borne by the customer. In the Extended warranty period, in case the product needs to be transported to the Authorised Service Center for repair, the transportation charges from and to the place of installation shall be borne and paid by the customer.
- The customer shall provide a reasonable, sufficient and safe working space to access the appliance for service. The customer is liable to move away all blocking objects or move the appliance to an appropriate location with electricity /gas/water supply and drainage for testing of the appliance.
- In case of appliance requires to be repaired at service centre, all expenses incurred in transportation of the appliance or parts thereof from and to the company's Authorised Service Center, as well as expenses incurred on deputing of service personnel/technician towards conveyance, inspection and other incidental expenses, will borne and paid by the customer.
- In case of repairs the replaced spare part will be warranted only for the unexpired period of the warranty.
- The company shall be under no obligation or deemed to be in default or liable for cost, compensation, damage, penalty, fine, or otherwise on account of delay or failure in performance resulting from causes beyond its reasonable control (e.g. strikes, floods, earthquakes etc.) including but not limited to delay in servicing due to non-availability of spare parts and/or accessories.
- The defective part shall belong to the company.
- Warranty issued is subject to purchase from authorized dealers and repair by company's authorized service centre only.
- Dispute if any in respect of Warranty shall be subject to exclusive jurisdiction of Mumbai court irrespective of the point of sale

Warranty is not applicable in any of the following cases:

- If the warranty card is not duly filled and does not bear the stamp, date and signature of the authorized Dealer.
- The warranty does not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly as a result of appliance failure, breakdown, or accident or usage of the Appliance not in accordance with the operating / user manual.
- Warranty is not applicable on plastic parts, electrical parts, top lid, assembly, control panel, window, knobs, nut, bolts, drain pipe, cabinet, dispenser assembly, drain hose, filter, castors, wheels, foot, drum, body of the washing machine and washer. The warranty does not cover consumables, normal wear & tear parts, plastic, glass and/or rubber parts, operational parts and accessories.
- If the Appliance has been subjected to improper use such as operated on trolley other than the one, if any purchased from the Company, use contrary to user manual, misused, abused, not cared for, abnormal use, use of sea water, sub-standard detergent, exposure to dampness, excessive heat, excessive humidity and other extreme environmental conditions, corrosion, damage beyond repair, rusting, unauthorised modifications, unauthorised repairs, neglect, accident, damage in transit, alteration, acts of God, spillage of liquid or food particles, faulty electric wiring/cablings, abnormal voltage/power supply beyond appliance specifications, damage/breakage/non-functioning of appliance due to rodents, rats, cockroaches and ants etc.
- The warranty does not cover preventive checks, routine maintenance, cleaning, de-scaling and overhaul and charges shall be borne and paid by Customer.
- If the Appliance is used by commercial establishment including but not limited to hospitals, saloon, institutions, laundry, community hall and other similar establishment or by an individual/ firm for commercial purpose.
- If the warranty card, bill of purchase, serial number of appliance is removed, altered, defaced, made illegal/tampered with. No Person including the customer, dealer, service personal shall have the right to vary the terms of this warranty.
- If incorrect/not suitable detergents are used for laundry appliances.
- If repair, installation work is carried out by persons other than Authorised Service Personnel.
- Damage to the appliance or any part(s) due to transportation or shifting or arising out of improper storage of the appliance at the Customer's premises.

## WARRANTY CARD

Machine Sl. No.:	_____
Model :	_____
Dealer's Name :	_____
Address :	_____
_____	_____
Date of Purchase :	_____
Date of Expiry :	_____
	Stamp of Dealer

\* CONDITIONS APPLY AS DESCRIBED IN MANUAL

3

Dear Customer ,

Congratulations ! You are now a proud owner of Onida Washing Machine. Study the user's Manual and take precautions for optimal performance and retain this manual for future reference.

Once again, Welcome to the happy ONIDA family .

## CONTENTS

Parts Identification.....	1-2
Installation.....	2-4
Preparations Before Washing.....	4-5
How to Wash.....	5
Reference.....	6
Care and Maintenance.....	7
Troubleshooting Guide.....	7
Safety Measures.....	8-9
Specifications.....	10
Onida Service Centres.....	11
Warranty Card	

## INSTALLATION

 
### Notes:

- Be sure to re-route the hose so that it is not kinked or has sharp bends which will prevent proper drainage.
- The level of the drain hose should be slightly lower than the lowest part of the washing machine in order to ensure proper and complete drainage.



### Connecting the power plug


- Insert the power plug into the outlet.
- If AC outlet with ground terminal is used, grounding is not needed. If not, never forget earthing (earthing method as below).

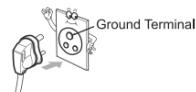

### Connecting the earth wire

#### \* WARNING: THIS APPLIANCE MUST BE EARTHED.

 - Install the earth wire to prevent short-circuit due to leaking current and electric shock.
- It is attached at the back of the washer. Connect it to the metal pipe. If the water pipe is made of plastic, it does not have the earth effect.
- Never connect the earth wire to the gas pipe, lighting arrester, telephone connector, etc.

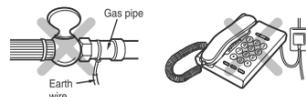

3

## PARTS IDENTIFICATION



## Accessories


### Inlet Hose



1

## INSTALLATION

Other earthing methods :

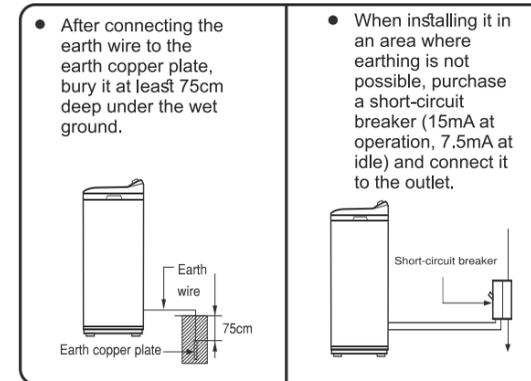

## PREPARATIONS BEFORE WASHING

### Preparation

- Attach Inlet Hose to water inlet and other end to a tap.
- Connect power plug.
- Always keep Drain Hose on the ground.

### Remember the following:

- Do not wash any clothing that has the instruction "Dry clean only".
- Remove loose articles from pockets of clothing.

4

## PARTS IDENTIFICATION

### Control panel



#### 1. Wash Selector

Select "NORMAL" for delicate clothes, select "HEAVY" for Heavy clothes and select "DRAIN" to drain the water from the tub.

#### 2. Water Supply Inlet

Connect the inlet hose from the water tap to feed water to the tub.

#### 3. Wash Timer

Select the desired time for washing.

#### CAUTION

Do not rotate the knob anticlockwise. Rotate the knob in clock wise direction as indicated by arrow & upto the Red Marking.

## INSTALLATION

### Installation Area

- Select flat and firm floor.
- Incorrect installation may cause severe noise and break down.
- Maintain more than 10cm between the side of drain hose and the wall.
- The base openings must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.

 


2

## PREPARATIONS BEFORE WASHING


### Before Washing

- Check the washing instructions labels on the clothing to be washed.
- Remove any objects from the pockets of the clothing. Object left in the pockets may damage the clothing or washing machine (especially cause clogging of the drain hose).
- After separating oiled and dyed laundry, begin washing.

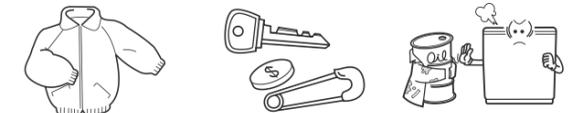

## HOW TO WASH

- Set WASH SELECT OR to NORMAL or HEAVY (according to type of laundry).
- Attach inlet hose on top of panel and supply water.
- Add detergent according to Table 2 (page 6) and allow it to disperse well.
- Put in clothes and add water upto desired water level.
- Set WASH SELECT OR to HEAVY, NORMAL and set the WASH TIMER as shown in Table 2 (Page 6).
- When washing is over, set WASH SELECT OR to DRAIN.
- After water is drained, set WASH SELECT OR to NORMAL or HEAVY as desired.

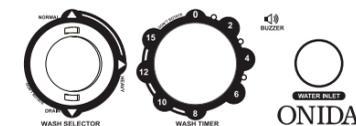

5